

OPERATION:

- ⊙ PRESS K0 and Power ON : COIN Restart
- ⊙ PRESS K1 and Power ON : Display Coin in and out
- ⊙ PRESS K2 and Power ON : Counts Coins
- ⊙ PRESS K3 and Power ON : Accounting
- ⊙ PRESS K0+K1 and Power ON : System Restart

WRONG MESSAGE:

- ⊙ 00 : RAM write incorrect
- ⊙ 02 : Counter meters wrong when machine start
- ⊙ 10 : IC#6116 brake down
- ⊙ 12 : Counter meters wrong when coin in/out
- ⊙ 30 : COIN brake down
- ⊙ 31 : COIN and BONUS ratio wrong(not normal)
- ⊙ 32 : Hooper wrong
- ⊙ 33 : Coin in wrong (total ratio not correct)
- ⊙ 34 : Coin out wrong (total ratio not correct)
- ⊙ 52 : Cheat on Coin selector

FEATURES:

1. Suitable for coffee shops
2. Attractive graphics
3. Easy to play

HOW TO PLAY:

1. Insert coins
2. Choose icons to play and push START button
3. Win if the light stops at the icons being chosen. Big icon wins credits played X odds shown on the bottom; Small flag wins credits played X 2.
4. Push START to move points from WIN to CREDIT or push BIG or SMALL to play double game; 1~6 for small and 8~13 for big, or push "PAYOUT" to win money
5. Collect the five football lights, win the bonus.