



COOLAIR MANUAL

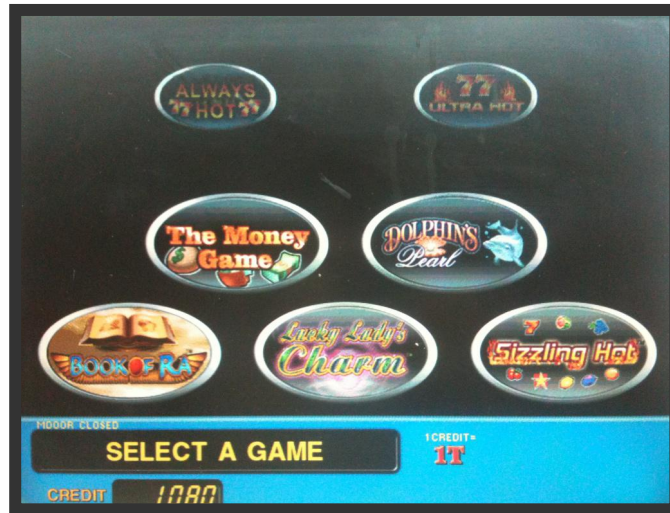

一、AUDIT MENU:

WE WILL FOLLOW EACH FEATURE TO EXPLAIN WHEN ENTER INTO THE "AUDIT MENU".

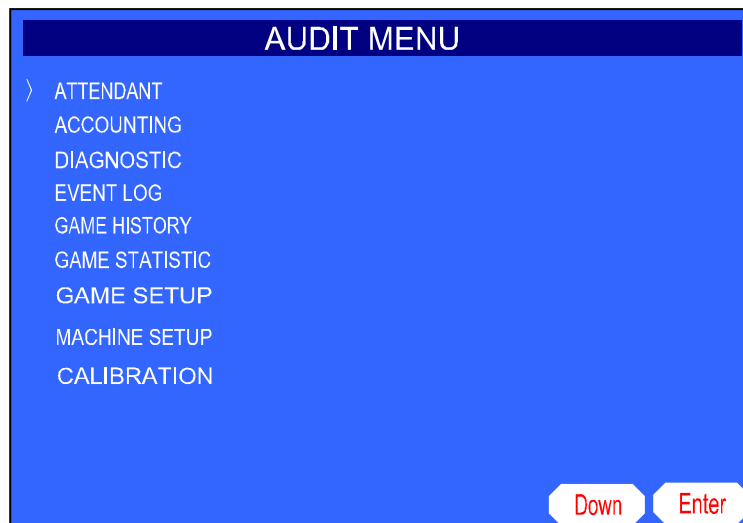

1. ATTENDANT

- REMOTE IN
- HANDPAY CREDIT

2. ACCOUNTING

- MASTER ACCOUNTING
- PERIODIC ACCOUNTING
- HARD METER COPY
- SECURITY ACCOUNTING

- PERIODIC METER CLEAR

3. DIAGNOSTIC

- PROGRAM VERSIONS
- DEVICE LISTING
- MACHINE SELFTTEST
- BUTTON AND LAMP TEST
- VEDIO TEST
- AUDIO TEST
- BILL ACCEPTOR TEST
- PAYTABLE TEST

4. EVENT LOG

- MACHINE EVENTS
- BILL ACCEPTOR EVENTS
- HANDPAY EVENTS
- CASHLESS CARD EVENTS
- JACKPOT EVENTS
- TICKET EVENTS
- REDEMPTION EVENTS

5. GAME HISTORY

6. GAME STATISTIC

- BOOK OF RA
- THE MONEY GAME
- LUCKY LADY' S CHARM
- DOLPHIN' S PEARL
- SIZZLING HOT
- ALWAYS HOT
- ULTRA HOT VIDEO

7. GAME SETUP

- BOOK OF RA
- THE MONEY GAME
- LUCKY LADY' S CHARM
- DOLPHIN' S PEARL
- SIZZLING HOT
- ALWAYS HOT
- ULTRA HOT VIDEO

8. MACHINE SETUP

- LIMIT SETUP
- PARAMETER SETUP

- BILL/COIN ACCEPTOR SETUP
- INITIAL SETUP
- GAME ENABLE/DISABLE
- NETWORK SETUP

9. CALIBRATION

- CLOCK SETUP
- SET VOLUME

二、 CONNECTION DIAGRAM:

- 72 Pin

72-pin connector		
Pin	Side A	Side B
1		
2	SPEAKER L	
3	SPEAKER R	GND
4	HOLD1 SW	
5	HOLD 2 SW	
6	HOLD 3 SW	
7	HOLD 4 SW	
8	HOLD 5 SW	
9	START SW	
10	BET ONE SW	
11	SELECT GAME SW	
12	AUTO START	
13		
14	MAXBET SW	SENDER
15	INFO SW	
16	FRONT DOOR SW	
17	BACK DOOR SW	
18	Coin in (Pulse mode)	SSR
19	INITIAL SW	
20	STATISTIC SW (short)	
21	COLLECT SW	
22		
23	BILLS COUNTER	SELECT GAME LAMP
24	DROP COUNTER	WBA LED
25	REMOTE COUNTER	UPPER LAMP BLUE
26	GAMES COUNTER	UPPER LAMP WHITE
27	HANDPAY COUNTER	WIN COUNTER
28	TOKEN COUNTER	BET COUNTER

29	HOLD 1 LAMP	BET ONE LAMP
30	HOLD 2 LAMP	MAXBET LAMP
31	HOLD 3 LAMP	COLLECT LAMP
32	HOLD 4 LAMP	
33	HOLD 5 LAMP	AUTO START LAMP
34	START LAMP	INFO LAMP
35		
36	GND	GND

● 10 Pin

10-pin connector		
PIN	Side A	Side B
1	GND	GND
2	GND	GND
3	+5v	+5v
4	+5v	+5v
5	+12v	+12v
6	+12v	+12v
7		
8		
9	GND	GND
10	GND	GND