

## Mix the line

JP1

01	+12V
02	G
03	G
04	+5V
05	G
06	Motor switch
07	Wash and divide
08	Open and divide
09	
10	+5V

JP2

01	+5V
02	+5V
03	G
04	G
05	SSR
06	+12V

JP3

01	Enter forms
02	Publish forms
03	+5V
04	+12V
05	+12V
06	+12V
07	SP
08	G
09	Insert coins
10	G

DIP-SW 1		1	2	3	4	5	6	7	8
MAX Escort the note	30	OFF							
	50	ON							
Open and divide Insert coins than	1:1		OFF	OFF					
	1:5		OFF	ON					
	1:10		ON	OFF					
	1:50		ON	ON					
Select one eight times	150				OFF				
	250				ON				
Insert coins	1					OFF	OFF		
	10					OFF	ON		
	50					ON	OFF		
	100					ON	ON		
Escort note than	1:1							OFF	
	5:1							ON	
Show the music	Normal								OFF
	NO								ON

★ Trouble code :



- 31: RAM materials are wrong ,Need to start the machine again
- 02: Stopwatch Trouble
- 04: COIN materials are wrong
- 18: Returning the coin motor has no COIN
- 09: 100,000 system halted
- 08: 50,000 system halted
- 30: Card coin
- 00: RAM hardware is wrong
- 99: Time system halted

★ K0-K3 Explanation

K0. K1: Belong to zero, probability is adjusted; Press and begin the key, enter the picture of revising ;  
Left and right key and change main game percentage;  
big and small key changes than one time of percentage; Escort the note key, revise a number

K1. K3: Count coins

K2: Check the discrepancy coin

K3: 1:JP frequency 2: Reward and turn into Grand Prix small frequency  
3: Three little celestial beings frequency 4: Three big celestial beings frequency  
5: Six six is big and suitable frequency 6: Train frequency 7: BAR frequency  
8: The lucky star is in the ascendant frequency 9: All lottery-attached frequency  
10: 24 lights frequency

k0: Check accounts

0: Net profit

1: The game accumulates the note of escorting

3: than time accumulate note of escorting more

10: Net profit

2: The game accumulates the bonus

4: Accumulate bonus more than time

11: Wash and divide