

PC-134

DIP SWSETTING

SUITE PROGRAM : 13406

DIP SWITCH (NO.1)		1	2	3	4	5	6	7	8
MAX BET 30/6 BET5:1		OFF							
MAX BET50/10 · BET 5:1		ON							
Bet Ratio 1:1			OFF	OFF					
Bet Ratio 2:2			OFF	ON					
Bet Ratio 5:5			ON	OFF					
Bet Ratio 5:1			ON	ON					
BET	1					OFF	OFF		
	2					OFF	ON		
	5					ON	OFF		
	10					ON	ON		
COIN IN	1coin							OFF	OFF
	5coin							OFF	ON
	10coin							ON	OFF
	50coin							ON	ON
DIP SWITCH (NO.2)		1	2	3	4				
RATIO	85%	OFF	OFF						
	80%	OFF	ON						
	75%	ON	OFF						
	70%	ON	ON						

PLEASE RESET THE MACHINE AFTER ANY ADJUSTMENT

Error Signal Code

02-Please check with the counter as well the pin connector with main board together

52-error signal by coin insert (Cheat Insert Coin)

10-IC 6116Broken

00-Main RAM Can not Reading Well with the Program..™

55-Main RAMRead in Wrong , Please reset the main board

again ..

PDF Editor

PC-134

FUNCTIONS

RESET : PRESS[K0]+[K1]→TURN ON MACHINE→TURN OFF MACHINE→TURN ON MACHINE→COMPLETE RESET ◦

1. SELECTIVE COIN REMOVAL/ COUNT : PRESS[K2]→TURN ON MACHINE→PRESS BUTTONS TO SELECT THE AMOUNT OF COINS ◦

Ps. MOVE LEFT BUTTON INCREASE AMOUNT , MOVE RIGHT BUTTON DECREASE AMOUNT , AND PRESS PAYOUT BUTTON TO PAY OUT COINS

2. AUDIT ACCOUNT : (1) PRESS[K4]→TURN ON MACHINE→USE START BUTTON TO CHANGE THE ACCOUNT SELECTION ◦

DESCRIPTION:

1. MACHINE SHOW BY LED ◦

2. EXTRA LIGHT 1~3 WHILE PLAYING

3. BOUNDS-SHOW BY ANYTIME , MAYBE ONPLAYING , DOUBLE UP , WIN ,

BONUS BY INCREASE FROM 100, EVERY TIME WIN THE BONUS THE BONUS ADD 50 POINTS , THE MAX BONUS TO 500 POINTS ◦

4. WIN TWO SIDE “ LAGI COBA DONG” HAVE THREE KIND EXTRA LIGHT 1~5 ◦

5. WIN OR WIN THE DOUBLE UP , WIN JP , TOTAL AMOUNT X 2 ◦

6. WHILE THE START HAS THREE SOUND , MEANS WIN THE PIKACHU PICTURE UP

PIKACHU WIN 1~5 LIGHT , DOWN PIKACHU WIN 1~4 LIGHT



PDF Editor

WIRE DIARGAM

CM13406

J1			J2		
1	SP+	BLACK	1	SSR	GREEN
2	SP-	BROWN	2		
3	COUNTER+12V	RED	3	+12V	ORANGE
4	COUNTER SIGN	ORANGE	4	+8V(5V)	BROWN
5	COUNTER+12V	YELLOW	5	GND	BLACK
6	COUNTER SINGNAL	GREEN	6	+5V	RED
7			7		
8			8		
9			9		
10			10		
J3			J4		
1			1	KB Pin	W/B
2			2	KB Pin	G/B
3	COIN IN SIGN	RED	3	KB Pin	P/R
4	COIN IN GND	ORANGE	4	KB Pin	B/O
5	HOPPER SIGN	YELLOW	5	KB Pin	G/Y
6	HOPPER GND	GREEN	6	KB Pin	Y/G
7	KEY OUT SIGNAL	BLACK	7	KB Pin	O/B
8	KEY OUT GD	PURPLE	8	KB Pin	R/P
9			9	KB Pin	B/G
10	HOPPER SENSOR+5V	白	10	KB Pin	B/W

HOPPER SENSOR	1	HOPPER+5V	COIN SENSOR	1	COIN+12V
	2	HOPPER SIGN		2	COIN SIGN
	3	HOPPER GROUND		3	COIN GROUND
	4			4	
SENSOR SWITCH ON NO SITUATION			SENSOR SWITCH ON NO SITUATION		

KEYBOARD

CM13406

15		14	13		12	11		10
8	7	6	5		4	3	2	1

1 : BET1 , BET LYCHEE

2 : BET2 , BET ORANGE

3 : BET3 , BET MANGO

4 : BET4 , BET BELL

5 : BET5 , BETWATERMELLON

6 : BET6 , BET STAR

7 : BET7 , BET 777

8 : BET 8 , BET BIKACHU

10 : BET 10 START

11 : BET 11 -DOUBLE UP (RIGHT)

12 : BET 12- DOUBLE UP (LEFT)

13 : BET 13 -MOVE RIGHT

14 : BET 14-MOVELEFT

15 : BET 15 -PAY OUT



wondershare™

PDF Editor