


Manual for CL1018


1: connect the coin selector. You can see the words "CL"



2: press "+" "-" at the same time, letter "C" will be shown.

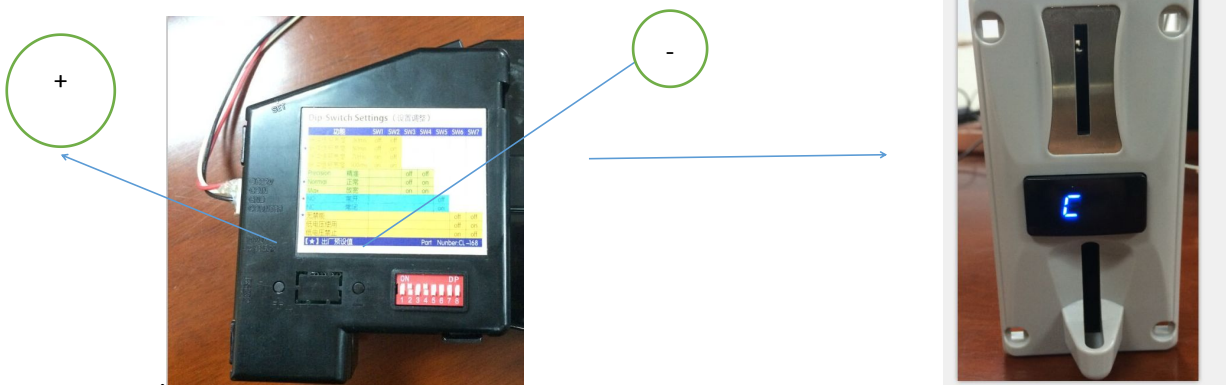

3: press "+" or "-" to adjust the coin quantity you want to use.. **Take 3 kinds of coin** 1. 2. 5as the example. Adjust the number into "3" and press the set button to confirm.(number can be changed from1-6 which mean one coin-6 kinds coin)

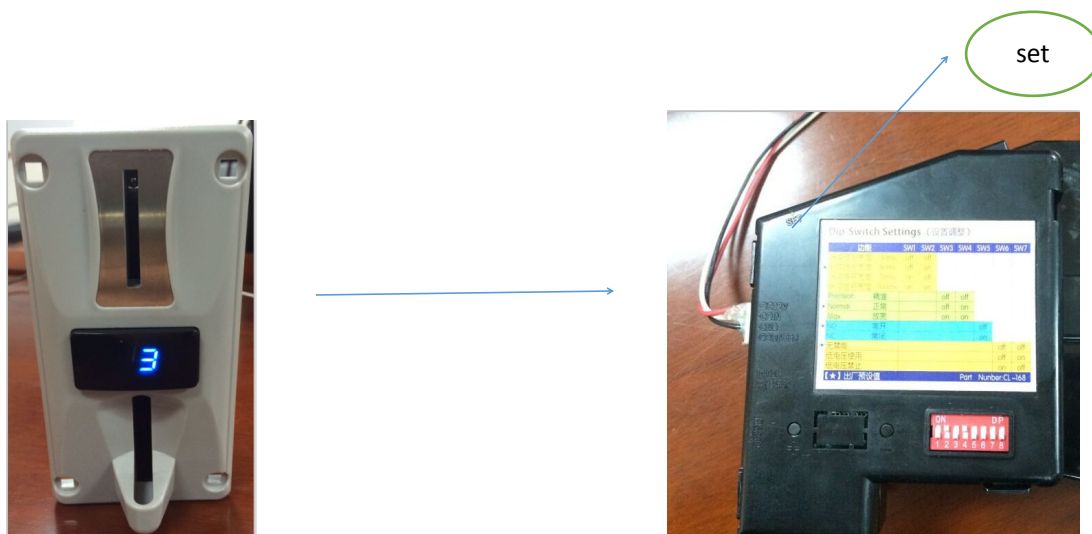

4: you can see the words:**P1**. It means the the pulse for the first coin. **You can press “+” or “-” to adjust pulse you need.** Take the ϕ 1 =1 pulse as the example.Adjust number into 1 and press set button to confirm.



5: by such analogy. Set ϕ 2=2 pulse. ϕ 5 =5pulse.



6: When you finish setting the pulse for each coin, the word "CL" will be shown. Then press set button for a few seconds until you see the letter "A".



Letter "A" means that it is the time to choose the sample coin you want to use.

7: press the set button again . The word "A1" will appear. Put in 20 pcs ϕ 1 sample coins. The word A1 will be changed into A2. It is the time to put in 20 pcs ϕ 2 sampls coins.



8:when you see word A3, pls put in 20 pcs ϕ 5 sample coin. When you see the word CL, it seems the coin selector has been programmed.



Guangzhou chilong electronic co.,ltd

Add: NO.7.8.9 Gangxin comprehensive building, Yingxing road, caisan, Shiqiao town, panyu district, guangzhou, China

TEL:86-20-39999677

Mail: cl@cl-game.com sales@cl-game.com Jerrychen@cl-game.com